


Perkadox 24-W35

Dicetyl peroxydicarbonate

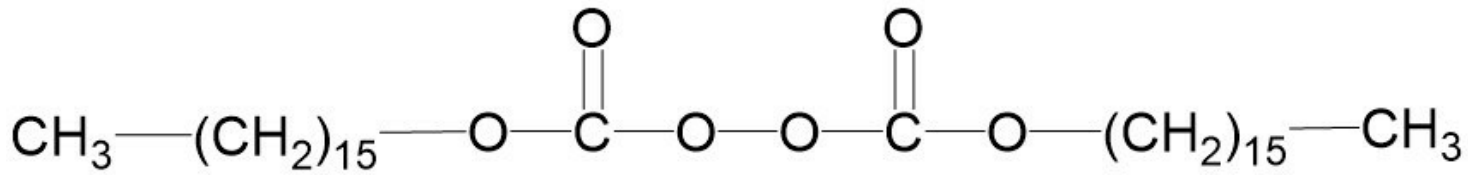

Initiator (35% water-based emulsion) for (co)polymerization of vinyl chloride and vinylidene chloride.

CAS number
26322-14-5

EINECS/ELINCS No.
247-611-0

TSCA status
listed on inventory

Specifications

Appearance	White suspension, no contamination
Assay	34.0-36.0 %
Viscosity, 20°C	500 mPa.s

Characteristics

Density, 20 °C	1.0 g/cm ³
----------------	-----------------------

Applications

Perkadox® 24-W35 is applied as an initiator in the suspension polymerization of vinylchloride in the temperature range between 45°C and 65°C. Perkadox® 24-W35 may be used in combination with other peroxides such as 1,1,3,3-Tetramethylbutyl peroxyneodecanoate (Trigonox 423), Cumyl peroxyneodecanoate (Trigonox 99) or Dilauroyl peroxide (Laurox) to increase reactor efficiency. Perkadox® 24-W35 is suitable for the manufacture of plastics for food contact applications. Reasons to use a water-based peroxide suspension instead of a solid or solvent-based peroxide are the following: enhanced safety, solvent free. No contamination of the VCM recycle stream, enhancement of PVC purity, easy to use (pumpable) in 'closed reactor technology', easy to dilute with water. Perkadox® 24-W35 contains a minimum of surfactants, and these are carefully selected so as not to influence the properties of the PVC produced.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Perkadox® 24-W35 in chlorobenzene:

0.1 hr	at 84°C
1 hr	at 65°C
10 hr	at 48°C
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2) / k_d$
Ea	124.30 kJ/mole
A	3.02E+15 s ⁻¹
R	8.3142 J/mole·K
T	(273.15+°C) K

Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT	40°C
Emergency temperature (T _e)	35°C
Control temperature (T _c)	30°C
Method	The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Nouryon recommends a maximum storage temperature (T_s max.) for each organic peroxide product.

T _s Max.	15°C
T _s Min.	0°C to prevent freezing
Note	When stored under these recommended storage conditions, Perkadox® 24-W35 will remain within the Nouryon specifications for a period of at least three months after delivery.

Packaging and transport

The standard packaging is a 30-liter HDPE can (Nourytainer®) for 25 kg suspension. Both packaging and transport meet the international regulations. For the availability of other packed quantities contact your Nouryon representative. Perkadox® 24-W35 is classified as Organic peroxide type F; liquid, temperature controlled, Division 5.2; UN 3119.

Safety and handling

Keep containers tightly closed. Store and handle Perkadox® 24-W35 in a dry well-ventilated place away from sources of heat or ignition and direct sunlight. Never weigh out in the storage room. Avoid contact with reducing agents (e.g. amines), acids, alkalis and heavy metal compounds (e.g. accelerators, driers and metal soaps). Please refer to the Safety Data Sheet (SDS) for further information on the safe storage, use and handling of Perkadox® 24-W35. This information should be thoroughly reviewed prior to acceptance of this product. The SDS is available at nouryon.com/sds-search

Major decomposition products

Carbon dioxide, Hexadecanol

All information concerning this product and/or suggestions for handling and use contained herein are offered in good faith and are believed to be reliable. Nouryon, however, makes no warranty as to accuracy and/or sufficiency of such information and/or suggestions, as to the product's merchantability or fitness for any particular purpose, or that any suggested use will not infringe any patent. Nouryon does not accept any liability whatsoever arising out of the use of or reliance on this information, or out of the use or the performance of the product. Nothing contained herein shall be construed as granting or extending any license under any patent. Customer must determine for himself, by preliminary tests or otherwise, the suitability of this product for his purposes. The information contained herein supersedes all previously issued information on the subject matter covered. The customer may forward, distribute, and/or photocopy this document only if unaltered and complete, including all of its headers and footers, and should refrain from any unauthorized use. Don't copy this document to a website.

Perkadox®, Nourytainer, Trigonox and Laurox are registered trademarks of Nouryon Chemicals B.V. or affiliates in one or more territories.

Contact Us

Polymer Specialties Americas
polymer.amer@nouryon.com

Polymer Specialties Europe, Middle East, India and Africa
polymer.emeia@nouryon.com

Polymer Specialties Asia Pacific
polymer.apac@nouryon.com

The Nouryon logo consists of a stylized blue 'N' followed by the word 'ouryon' in a lowercase, sans-serif blue font.