


# Trigonox EHPS

Di(2-ethylhexyl) peroxydicarbonate

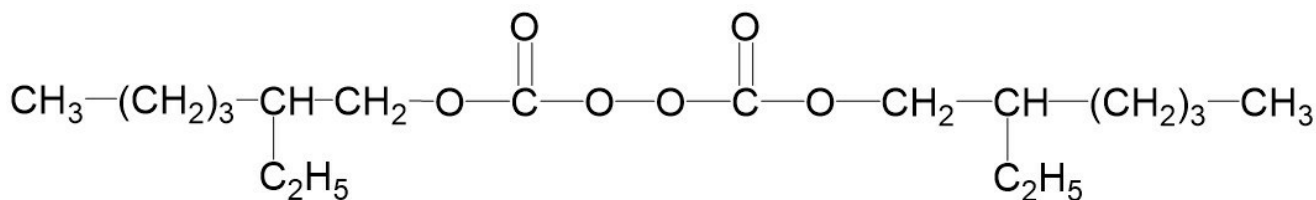

Trigonox® EHPS is applied as an initiator for the suspension polymerization of vinyl chloride in the temperature range between 40°C and 65°C. Trigonox® EHPS can be used in combination with other peroxides such as 1,1,3,3-Tetramethylbutyl peroxyneodecanoate (Trigonox® 423), Cumyl peroxyneodecanoate (Trigonox® 99) or Dilauroyl peroxide (Laurox) to increase reactor efficiency.

CAS number  
16111-62-9

EINECS/ELINCS No.  
240-282-4

TSCA status  
listed on inventory

Molecular weight  
346.5

Active oxygen content  
peroxide  
4.62%

Concentration  
4.48% min.

## Specifications

Active oxygen	≥ 4.53 %
Appearance	Clear liquid
Assay	≥ 98.0 %
Color	≤ 20 Pt-Co / APHA
Inorganic + organic hydrolysable chloride	≤ 100 mg/kg

## Applications

Trigonox® EHPS can be used for the market segments: polymer production and acrylics with their different applications/functions. For more information please check our website and/or contact us.

## Half-life data

The reactivity of an organic peroxide is usually given by its half-life ( $t_{1/2}$ ) at various temperatures. For Trigonox® EHPS in chlorobenzene half-life at other temperatures can be calculated by using the equations and constants mentioned below:

0.1 hr	at 83°C
1 hr	at 64°C
10 hr	at 47°C
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t_{1/2} = (\ln 2)/k_d$
$E_a$	122.45 kJ/mole
A	1.83E+15 s <sup>-1</sup>
R	8.3142 J/mole·K
T	(273.15+°C) K

## Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT	0°C
Emergency temperature (T <sub>e</sub> )	-10°C
Control temperature (T <sub>c</sub> )	-20°C
Method	The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

## Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Nouryon recommends a maximum storage temperature

Ts Max.	-20°C
Note	When stored according to these recommended storage conditions, Trigonox® EHPS will remain within the Nouryon specifications for a period of at least three months after delivery.

## Packaging and transport

The standard packaging is a 30 l HDPE can (Nourytainer®) for 25 kg peroxide solution. Both packaging and transport meet the international regulations. For the availability of other packed quantities consult your Nouryon representative. Trigonox® EHPS is classified as Organic peroxide type C; liquid, temperature controlled; Division 5. 2; UN 3113.

## Safety and handling

Keep containers tightly closed. Store and handle Trigonox® EHPS in a dry well-ventilated place away from sources of heat or ignition and direct sunlight. Never weigh out in the storage room. Avoid contact with reducing agents (e. g. amines), acids, alkalis and heavy metal compounds (e. g. accelerators, driers and metal soaps). Please refer to the Material Safety Data Sheet (MSDS) for further information on the safe storage, use and handling of Trigonox® EHPS. This information should be thoroughly reviewed prior to acceptance of this product. The MSDS is available at [nouryon.com/sds-search](http://nouryon.com/sds-search).

## Major decomposition products

Carbon dioxide, 2-Ethylhexanol

All information concerning this product and/or suggestions for handling and use contained herein are offered in good faith and are believed to be reliable. Nouryon, however, makes no warranty as to accuracy and/or sufficiency of such information and/or suggestions, as to the product's merchantability or fitness for any particular purpose, or that any suggested use will not infringe any patent. Nouryon does not accept any liability whatsoever arising out of the use of or reliance on this information, or out of the use or the performance of the product. Nothing contained herein shall be construed as granting or extending any license under any patent. Customer must determine for himself, by preliminary tests or otherwise, the suitability of this product for his purposes. The information contained herein supersedes all previously issued information on the subject matter covered. The customer may forward, distribute, and/or photocopy this document only if unaltered and complete, including all of its headers and footers, and should refrain from any unauthorized use. Don't copy this document to a website.

Trigonox® and Laurox are registered trademarks of Nouryon Functional Chemicals B. V. or affiliates in one or more territories.

## Contact Us

**Polymer Specialties Americas**  
[polymer.amer@nouryon.com](mailto:polymer.amer@nouryon.com)

**Polymer Specialties Europe, Middle East, India and Africa**  
[polymer.emeia@nouryon.com](mailto:polymer.emeia@nouryon.com)

**Polymer Specialties Asia Pacific**  
[polymer.apac@nouryon.com](mailto:polymer.apac@nouryon.com)

The Nouryon logo consists of a stylized blue 'N' followed by the word 'ouryon' in a lowercase, sans-serif font. The 'N' is significantly larger and more prominent than the rest of the text.